

STD & SPEC 3.20.

ROCK CHECK DAMS



Definition

Small temporary stone dams constructed across a swale or drainage ditch.

Purnose

To reduce the velocity of concentrated stormwater flows, thereby reducing erosion of the swale or ditch. This practice also traps sediment generated from adjacent areas or the ditch itself, mainly by ponding of the stormwater runoff. Field experience has shown it to perform more effectively than silt fence or straw bales in the effort to stabilize "wet-weather" ditches.

Conditions Where Practice Applies

This practice, utilizing a combination of stone sizes, is limited to use in small open channels which drain 10 acres or less. It should not be used in a live stream as the objective should be to protect the live watercourse. Some specific applications include:



III - 185

1992

Removal of Practice

Unless they will be incorporated into a permanent stormwater management control, check dams must be removed when their useful life has been completed. In temporary ditches and swales, check dams should be removed and the ditch filled in when they are no longer needed. In permanent structures, check dams should be removed when a permanent lining can be installed. In the case of grass-lined ditches, check dams should be removed when the grass has matured sufficiently to protect the ditch or swale. The area beneath the check dams should be seeded and mulched immediately after they are removed. The use of filter cloth underneath the stone will make the removal of the stone easier.

Maintenance

Check dams should be checked for sediment accumulation after each runoff-producing storm event. Sediment should be removed when it reaches one half of the original height of the measure.

Regular inspections should be made to insure that the center of the dam is lower than the edges. Erosion caused by high flows around the edges of the dam should be corrected immediately.

III - 189

1992

1. Temporary ditches or swales which, because of their short length of service, cannot receive a non-erodible lining but still need protection to reduce erosion.

3.20

AND THE PROPERTY OF THE PROPER

- 2. Permanent ditches or swales which, for some reason, cannot receive a permanent non-erodible lining for an extended period of time.
- 3. Either temporary or permanent ditches or swales which need protection during the establishment of grass linings.
- 4. An aid in the sediment trapping strategy for a construction site. This practice is not a substitute for major perimeter trapping measures such as a SEDIMENT TRAP (Std. & Spec. 3.13) or a SEDIMENT BASIN (Std. & Spec. 3.14).

Planning Considerations

Check dams are effective in reducing flow velocity and thereby the potential for channel erosion. It is usually better to establish a protective vegetative liming before flow is confined or to install a structural channel lining than to install check dams. However, under circumstances where this is not feasible, check dams are useful.

Check dams installed in grass-lined channels may kill the vegetative lining if submergence after rains is too long and/or silting is excessive.

If check dams are used in grass-lined channels which will be mowed, care should be taken to remove all the stone when the dam is removed. This should include any stone which has washed downstream.

As previously mentioned, they have been found to be an effective aid in trapping sediment particles by virtue of their ability to pond runoff.

Specifications

No formal design is required for a check dam, however the following criteria should be adhered to when specifying check dams:

- 1. The drainage area of the ditch or swale being protected shall not exceed 2 acres when VDOT #1 Coarse Aggregate is used alone and shall not exceed 10 acres when a combination of Class I Riprap (added for stability) and VDOT #1 Coarse Aggregate is used. Refer to Plate 3.20-1 for orientation of stone and a cross-sectional view of the measure. An effort should be made to extend the stone to the top of channel banks.
- 2. However, the maximum height of the dam shall be 3.0 feet.

III - 186

Source: Va. DSWC

III - 187


Plate 3.20-1

1992

- 3. The center of the check dam <u>must be at least 6 inches lower than the outer edges</u>. Field experience has shown that many dams are not constructed to promote this "weir" effect. Stormwater flows are then forced to the stone-soil interface, thereby promoting scour at that point and subsequent failure of the structure to perform its intended function.
- 4. For added stability, the base of the check dam can be keyed into the soil approximately 6 inches.
- The maximum spacing between the dams should be such that the toe of the upstream dam is at the same elevation as the top of the downstream dam (see Plate 3.20-2).
- 6. Stone should be placed according to the configuration in Plate 3.20-1. Hand or mechanical placement will be necessary to achieve complete coverage of the ditch or swale and to insure that the center of the dam is lower than the edges.
- Filter cloth may be used under the stone to provide a stable foundation and to facilitate the removal of the stone. See Std. and Spec. 3.19, RIPRAP, for required physical properties of the filter cloth.

Sediment Removal

Sediment should be removed from behind the check dams when it has accumulated to one half of the original height of the dam.

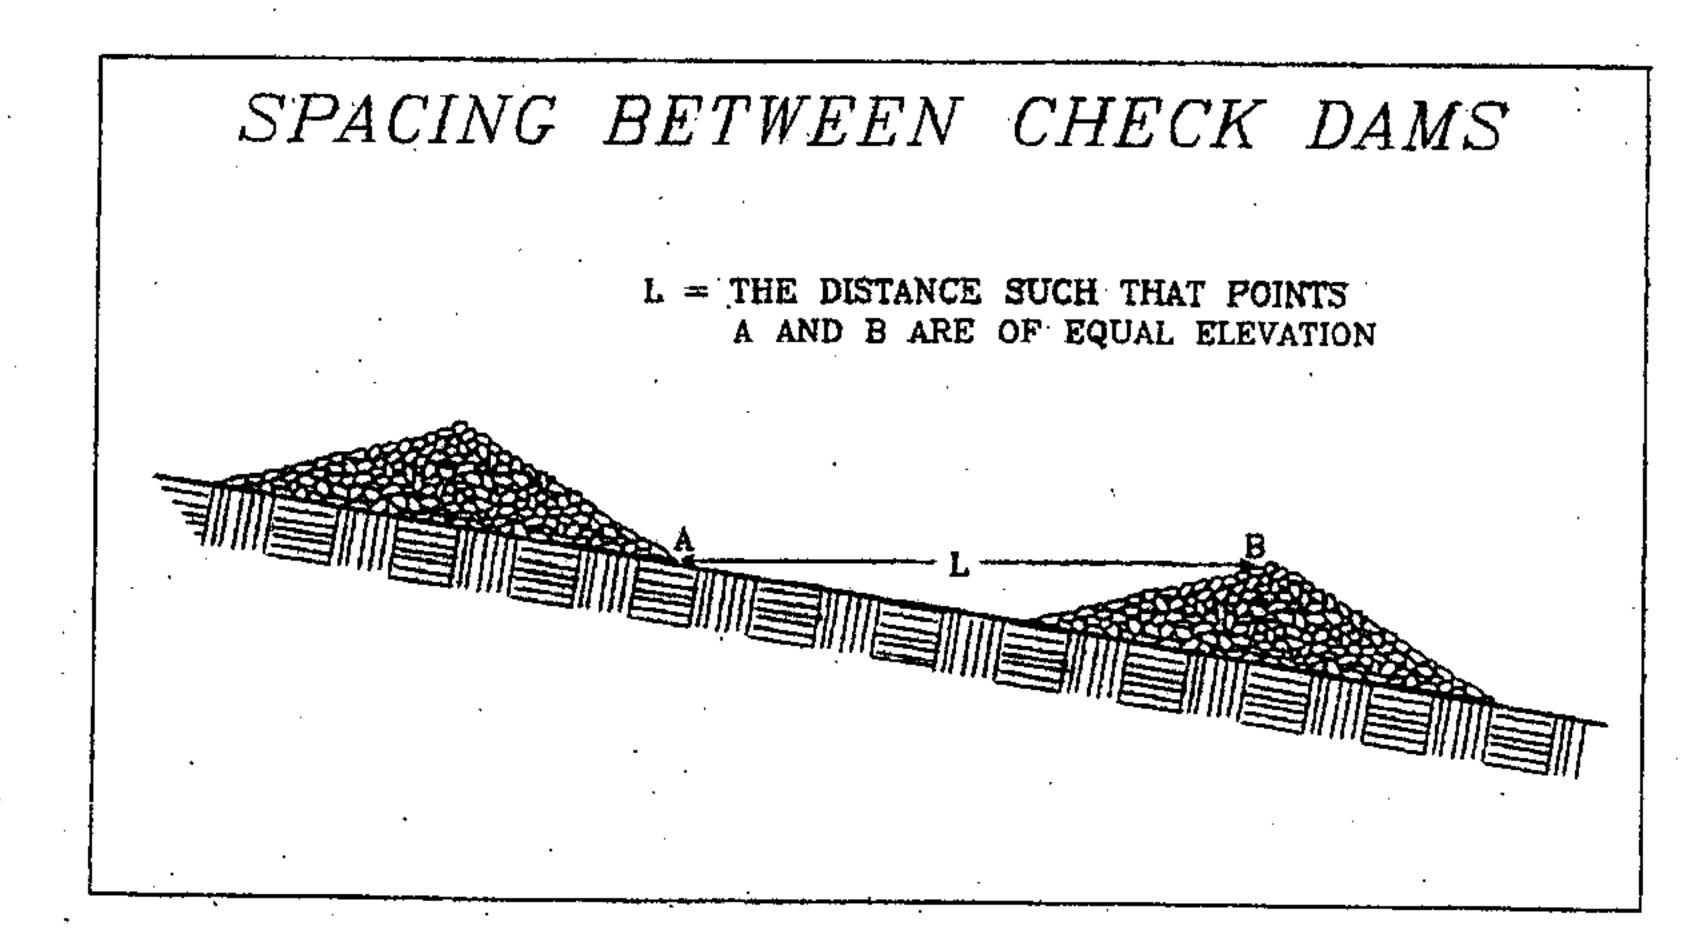

Source: Va. DSWC

Plate 3.20-2

III - 188

3.20

AND IS NOT TO BE REPRODUCED OR USED FOR ANY PROJECT IN WHOLE OR IN PART WITHOUT EXPRESS WRITTEN PERMISSION

THIS DRAWING IS THE PROPERTY

OF BAY DESIGN GROUP, P.C.

04287-06

04287ECDET

DESIGNED:
GLW
CHECKED:

DATE: OCT. 10, 2005

REVISED: MAR. 15, 2006
PER COUNTY COMMENTS
REVISED: MAY 3, 2006
PER COUNTY COMMENTS



Engineering Surveying & Land Plane PROJECT OFFICE:


RICHMOND 9415-A ATLEE COMMERCE BLVD. ASHLAND VA. 23005 (804) 550-4855 FAX: (804) 550-4857

OTHER OFFICES:

MIDDLE PENINSULA

BUSINESS ROUTE 17 NORTH
P.O. BOX 509 SALUDA VA. 23149
(804) 758-5678
FAX: (804) 758-5920

TIDEWATER 7307 MARTIN STREET P.O. BOX 895 GLOUCESTER VA. 23061 (804) 693-2993 FAX: (804) 693-5596

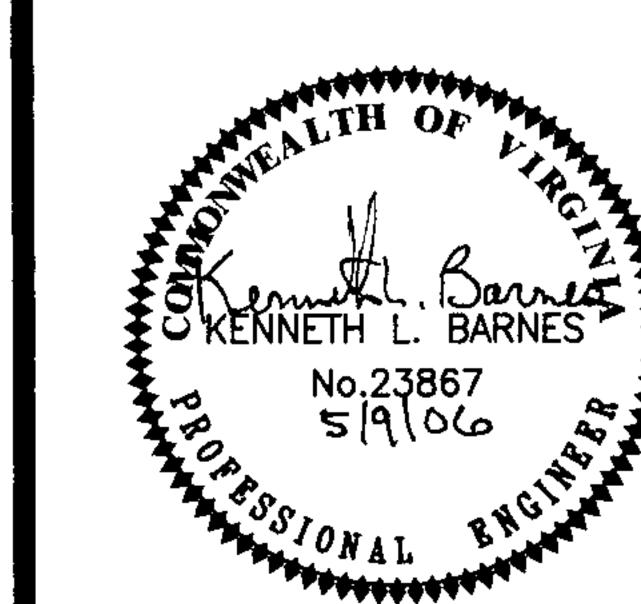

PROJEC

Waterside at Jordan

Condominiums

Bland District Prince George County, Virginia

SHEE

Erosion
Control
Notes &
Details

SHEET NO:

C 1 C

JOB NO.

U4ZU/