PROCEDURES FOR INSTALLING 6 INCH LATERALS

TO EXISTING SANITARY SEWER LINES

1. THE CONTRACTOR SHALL NOTIFY THE UTILITIES DEPARTMENT'S CHIEF INSPECTOR (733-2614) 48 HOURS PRIOR TO BEGINNING CONSTRUCTION.
2. WHEN TAPPING THE SEWER LINE, A MECHANICAL HOLE CUTTER AND AN APPROVED SADDLE MUST BE USED. THE TAP MUST BE MADE SO THAT THE 6 INCH CONNECTION WILL ENTER THE MAIN LINE ON A SLOPE NO GREATER THAN 45 DEGREES. NO CONNECTION SHALL BE CUT INTO THE TOP OF A SEWER LINE.
3. THE 6 INCH CONNECTION IS TO BE CONSTRUCTED ONLY TO THE PROPERTY LINE AND/OR THE EDGE OF THE RIGHT-OF-WAY EASEMENT IN WHICH THE MAIN SEWER LINE LIES.
4. THE CONTRACTOR IS RESPONSIBLE FOR DAMAGES TO ANY EXISTING UTILITIES.

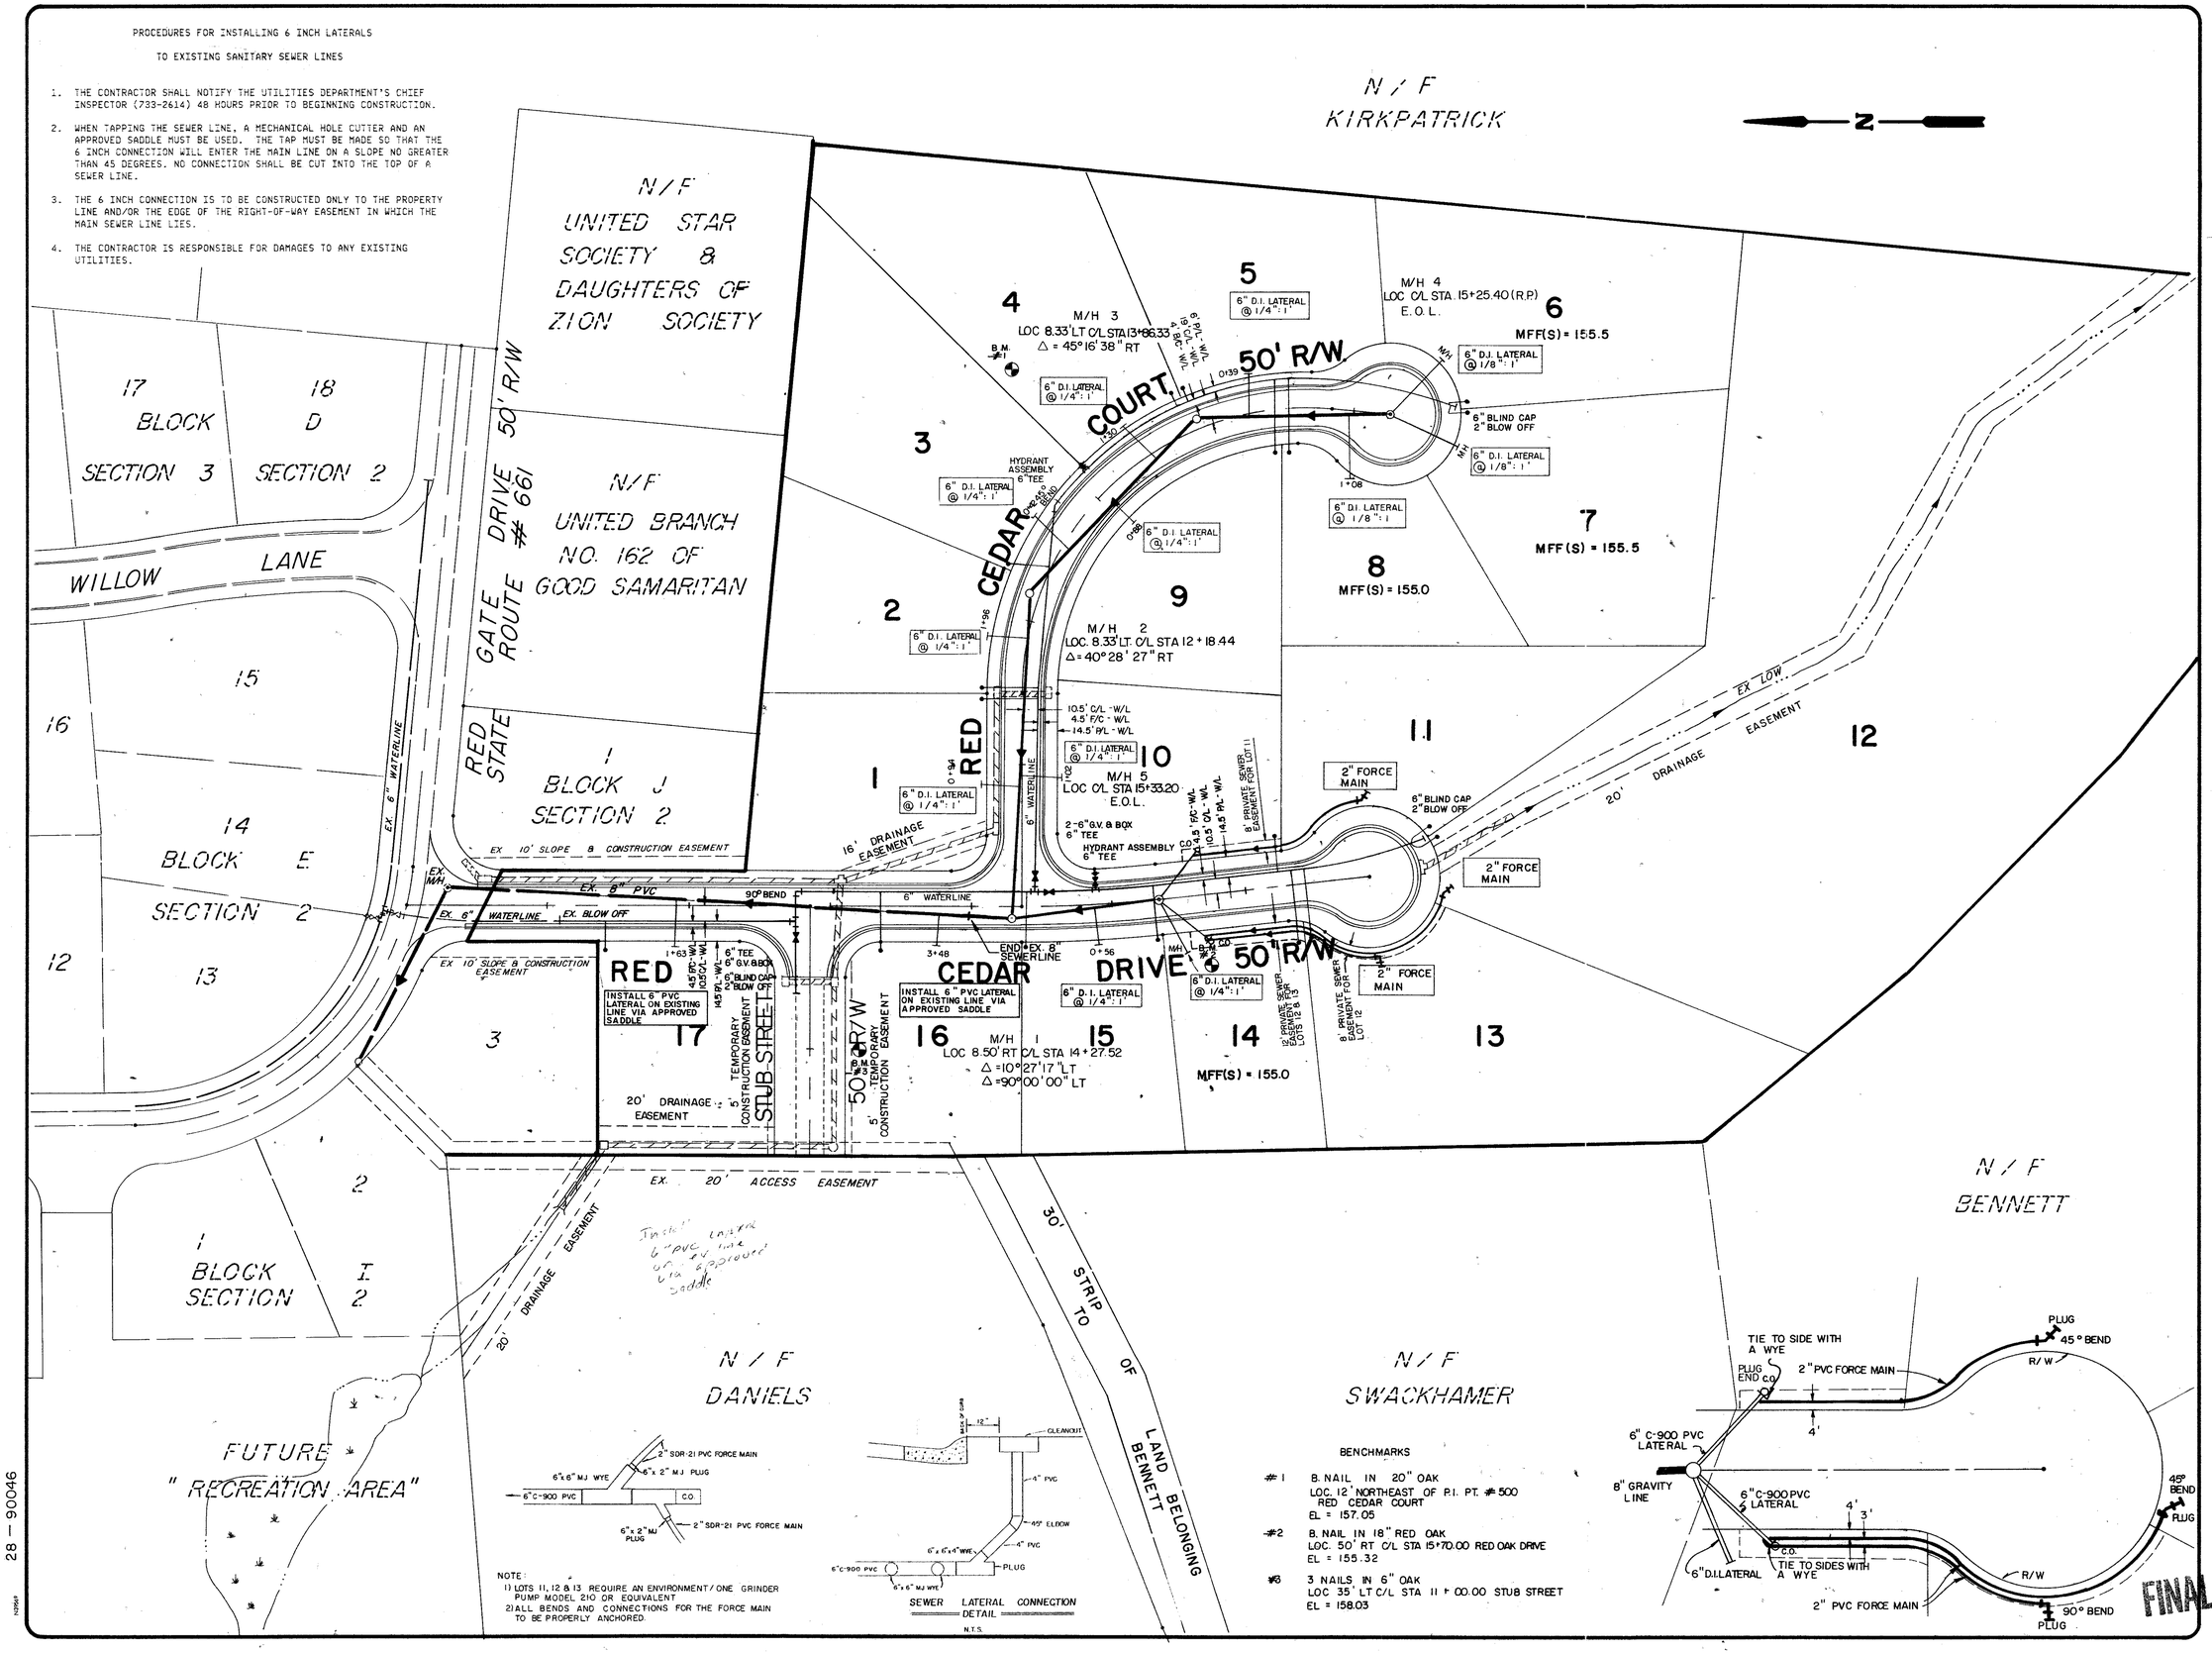

CHARLES C. TOWNES & ASSOCIATES, P.C.
Engineers, Planners, Land Surveyors
9842 Lori Road, Suite 201
Chesterfield, Virginia 23832
804-748-9011

COMMONWEALTH OF VIRGINIA
DONALD T. D. WARRINER
No. 016881
PROFESSIONAL ENGINEER

WILDWOOD FARMS
SECTION 4
RIVES DISTRICT
PRINCE GEORGE COUNTY, VIRGINIA

PROPOSED UTILITIES

REVISIONS	
DATE	ITEM
1-9-91	
1-18-91	
3-18-91	
4-25-91	
5-15-91	

DATE: NOVEMBER 26, 1990
SCALE: 1" = 50'
DRAWN BY: CLF
CHECKED BY: DTDW
F.B. #:
SHEET #: 4

28 — 90046